


PV SPD Wiring Diagram

Typical installation positions for combiner boxes and inverter cabinets

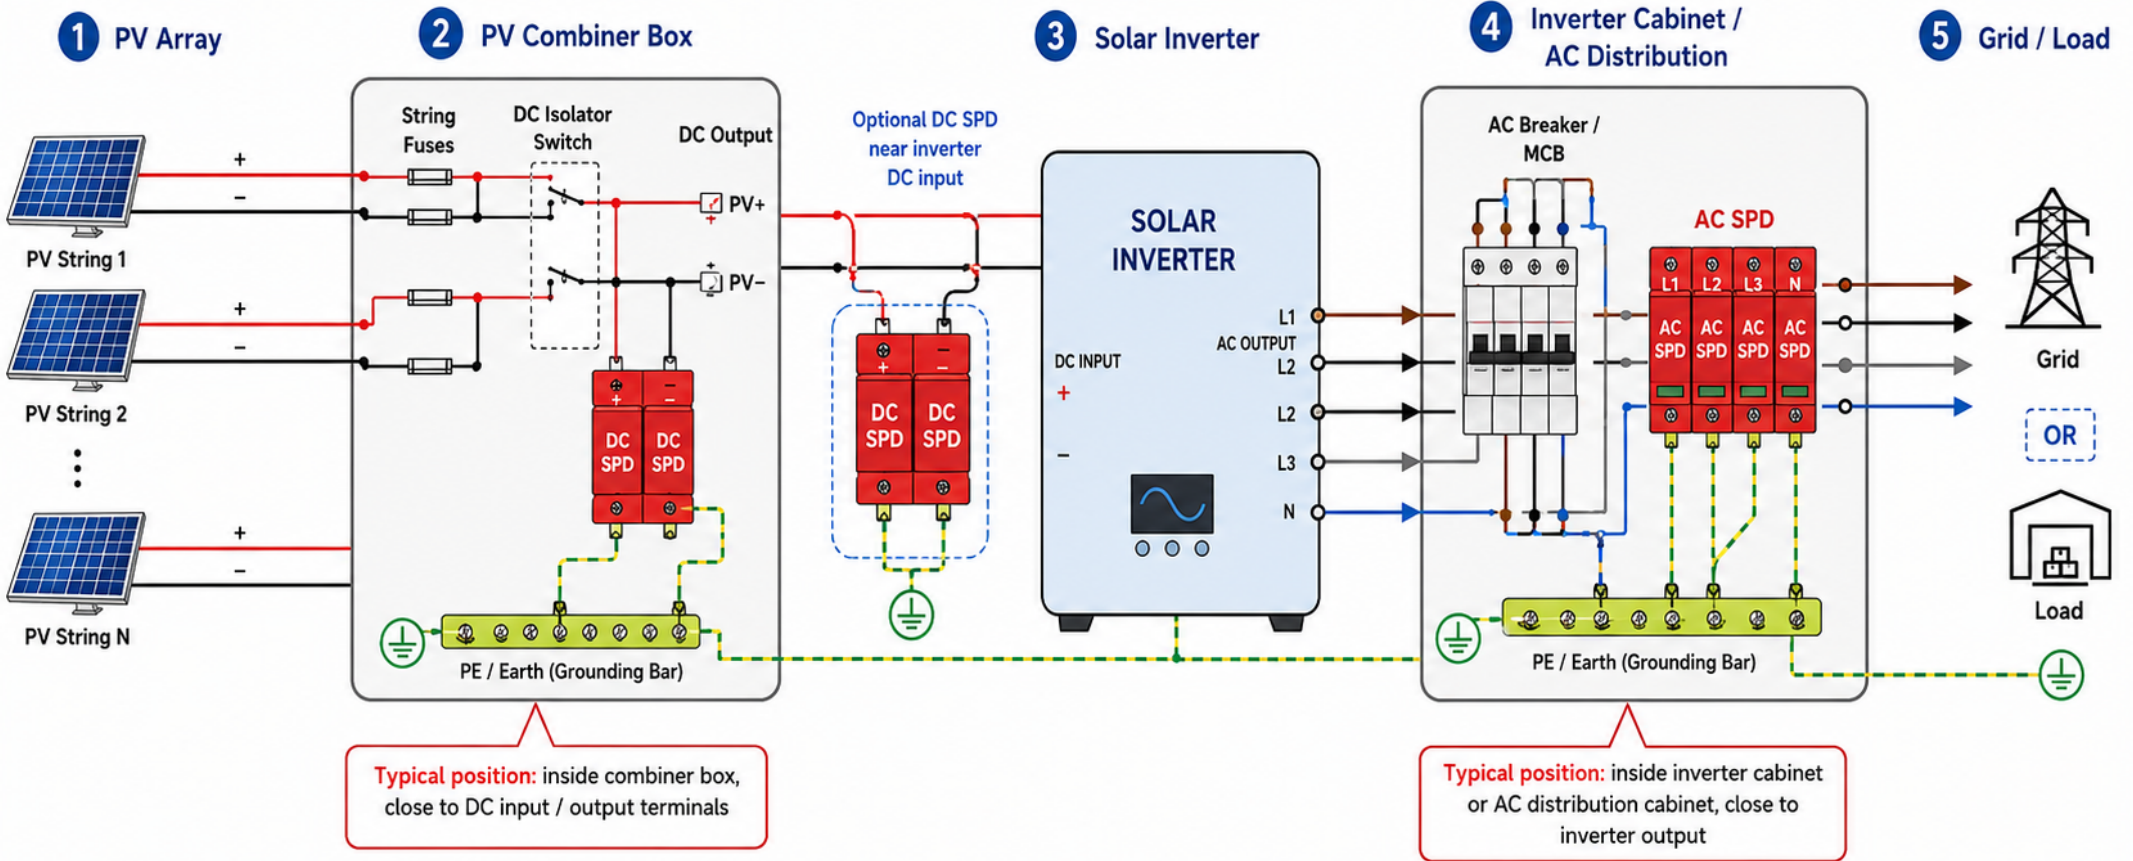

1 SPDs should be connected in parallel.

2 Keep connecting leads as short as possible.

3 Bond SPD earth terminal to the PE grounding bar.